

**SAFETY INSTRUCTIONS**

Please read these instructions carefully before operating this device.

**POWER SOURCE**

- Only use the power supply that came with the product. Using an unauthorized power supply will invalidate your guarantee and may irreversibly damage the product.
- Disconnect your speaker from the power supply during thunderstorms.
- Always check that you have completely switched off your Speaker before you change or disconnect the power supply. Moisture and water
- Do not leave product in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Keep away from heat sources and flames
- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

**Caution**

To avoid possible hearing damage, do not listen to this Speaker/Earbuds at high volume levels for long periods of time. Always keep the volume within reasonable limits.

**General safety information**

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

. 1 .

**Power ON/OFF**

**Speaker**  
Press and hold POWER button to turn speaker on/off.  
**Earbuds**  
Simply remove from the charging compartment and earbuds will turn on and pair to each other.

**Charging**

Connect the included charging cable to a computer USB port or USB wall charger (not included) to recharge your device. The four LED indicators by the power button show the battery level.

**Power bank function**

To use the built-in power bank simply connect the included charging cable into the USB port of the speaker and the other end to the charging port of your Android mobile device. For IOS, please use an MFI charging cable (not included) and connect the same way to charge your mobile device.

**Quick Connection Guide**

- I.** Pairing to a Bluetooth enabled device  
**A.** Press and hold the power button for about two seconds to turn on the speaker. Earbuds can be paired without turning speaker on, simply by removing from the charging compartment.  
**B.** Once speaker/earbuds are turned on, enter Bluetooth mode on your mobile device, search for "TWS HEAD" and select.  
**C.** If asked for Pass/Pin code, please enter "0000" (four zeros).  
\*Note: if your phone supports Secure Simple Pairing (SSP), you will not need to enter any code.  
**D.** Speaker/earbuds will prompt to indicate the pairing has been successful.
- . 2 .

**Auto Reconnect**

If the speaker/earbuds are turned off (either accidentally or intentionally) while connected to a phone, the speaker/earbuds and phone will reconnect when the speaker/earbuds are turned back on while in range. It is possible to use these functions only when your phone supports them.  
For further information about using these features please consult your phone's user manual.

**Out of Range**

- If the paired devices are separated by a range of 33 feet (10 Meters) or more, the speaker/earbuds and phone will disconnect.
- If the speaker/earbuds and phone do not automatically reconnect when they are back within the required range, select "TWS HEAD" on the list of devices with Bluetooth® technology on your mobile phone to reconnect manually.

**Answering a Call**

- When there is an incoming call, the earbuds will ring.
- Touch either L/R earbud to answer the incoming call.
- You can also touch and hold either earbud to decline the incoming call.

While in a call briefly touch either L/R earbud.

**Audio Streaming**

From speaker: once paired to your mobile device you can stream music through the speaker while controlling volume and track selection on your mobile device.  
From earbuds: with the music streaming app open on your mobile phone and after pairing with the earbuds, music will

. 3 .

play on both earbuds.

- **Play/Pause:** Touch either L/R earbud to play/pause the music.
- **Previous track:** Double tap L earbud to restart song or play the previous one.
- **Next track:** Double tap R earbud to play the next song.
- **Volume down:** Touch and hold L earbud for 2 seconds, earbud will beep and lower the volume.
- **Volume up:** Touch and hold R earbud for 2 seconds, earbud will beep and increase the volume.

**Specs**

**I. Earbuds**

**Earbuds batteries:** polymer lithium battery 50mAh  
**Bluetooth® version:** 5.0  
**Working voltage:** 3.2V - 4.2V  
**Bluetooth® frequency:** 2.4 - 2.48GHz  
**Bluetooth® distance:** 10M  
**Audio transmission format:** A2DP I H FP / HSP / AVRCP  
**Working time:** 4-5 hours  
**Stand-by time:** 3 months

**II. Speaker / Charging case**

**Charging case battery:** polymer lithium battery 1500mAh  
**Output Power:** 3W  
**Frequency Response:** 20Hz-20KHz DC  
**Charging current:** 1 A  
**DC charging voltage:** DC 5V  
**Stand-by Time of Charging Compartment:** 6 months

. 4 .

**Troubleshooting**

- If only one of the earbuds pairs with the mobile device:  
**1)** Check if the earbud that did not pair is on, if it isn't turn it on and it should automatically pair to the other earbud and the mobile device  
**2)** If both earbuds are on but only one pairs to the mobile device, place both earbuds back into the charging compartment, this will make both earbuds pair to each other. Take out of the charging compartment and pair with the mobile device.



is distributed by **CJ Global Inc.**  
All rights reserved. 2010 Maple Ave Fair Lawn NJ 07410  
The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by CJ Global is use under license.  
Other Trademarks and trade names are those of their respective owners.

MADE IN CHINA



. 5 .



**TWS Earbuds with speaker and 1500mah power bank**



24242