

4,000 mAh Solar Power Bank

with built in Compass


ITEM 53385-DI



User Manual

ENGLISH

PRODUCT SPECIFICATION

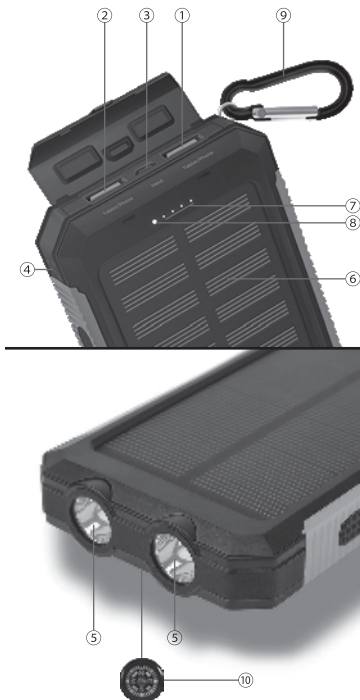

POWER BANK INSTRUCTIONS

- ① **USB Output A: 5V/1A**
- ② **USB Output B: 5V/2A**
- ③ **Micro USB Input: 5V/2A**
- ④ **Power button ON/OFF**
- ⑤ **LED Torch Light:** Long press the button to turn on the LED light, press again enter SOS mode, press third time to enter explosion-flashing mode, press fourth time to turn off the LED torch light
- ⑥ **Solar Panel** (Charge the power bank in direct sunlight)
- ⑦ **4 LED lights to indicate battery capacity**
1 LED light means 25% battery capacity, 2 LED lights means 50% battery capacity, 3 LED lights means 75% battery capacity, 4 LED lights means 100% battery capacity
- ⑧ **Solar Indicator**
- ⑨ **Carabiner**
- ⑩ **Compass**

CHARGING YOUR DEVICE

- (a) Use a suitable cable to connect the power bank to your device to charge it.
- (b) Fully charge the power bank before 1st time use.

CHARGING THE SOLAR POWER BANK

You can recharge the Solar Power Bank in direct sunlight or the traditional way with the included Micro USB Cable.

- (a) You can charge this solar power bank from direct sunlight. Note that this charging method will take longer than with a standard charging cable.
- (b) You can also charge this solar power bank using the included Micro USB Cable to connect the power bank to USB Power source like a home charger or a computer.
- (c) While charging the Power Bank you will notice the battery level indication (LED Lights flashing). 1 LED light flashing means the power bank is 25% charged, 2 LED lights flashing mean the power bank is 50% charged, 3 LED lights flashing mean the power bank is 75% charged, and 4 LED lights flashing mean the power bank is 100% charged. After fully charged the LED lights will stop flashing and all 4 will remain ON. As you use the power bank and the battery starts to run out you will see the LED lights turn OFF one at a time. Once you get to only 1 LED light remaining ON this means the power bank needs to be recharged

THIS ITEM CONTAINS A NON-REPLACEABLE BATTERY. WHEN THE BATTERY IS DEPLETED, PLEASE FOLLOW YOUR LOCAL GUIDELINES FOR DISPOSAL

Caution:

To prevent fire or shock hazard, do not expose this unit to rain or moisture.
Do not expose the batteries to excessive heat.
To avoid electrical shock, do not disassemble.
Never insert objects of any kind, other than authorized item into the product that could result in fire or and sync cable electrical shock.
Do not dispose of this product in fire. Refer to local and city guidelines for appropriate methods of battery disposal.
This product contains small parts that may cause choking if swallowed. This is not an toy and not intended for use by children.
Use your existing Sync & Charge Cable to power your device.
Fully charge before use. Do not leave charging overnight.